


STATION USER GUIDE

The KX-T30830, KX-T30820 and/or KX-T30850 can be connected to the KX-T61610. Additional features will be provided with the KX-T30830, KX-T30820 and/or KX-T30850 by this connection. Use this Station User Guide with the Operating Instructions of the KX-T30830, KX-T30820 and/or KX-T30850.

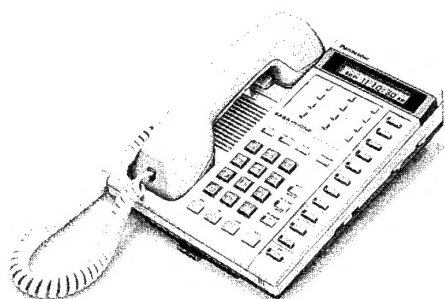

KX-T30830



KX-T61610



KX-T30820



KX-T30850

Panasonic
EASA-PHONE

Paging Group

Allows paging to one of four groups.

 
The page can only be heard from a KX-T61630, KX-T61620, KX-T61650, KX-T30830, KX-T30820 or KX-T30850.

To Access

For Pickup Group 1



LIFT THE HANDSET
OR PRESS
"SP-PHONE"



DIAL "35"



CONFIRMATION
TONE OF 1~
BEEP WILL
BE HEARD



PAGE



WAIT FOR AN
ANSWER
AND TALK

- Page will be heard from built-in speaker.



- For Pickup Group 2: At step 2 above, dial 36 instead of 35.
- For Pickup Group 3: At step 2 above, dial 37 instead of 35.
- For Pickup Group 4: At step 2 above, dial 38 instead of 35.

 
Call Park Retrieve

Allows extension user to retrieve a call (intercom or outside) on hold at any extension.


To Retrieve a Parked Call at Any Extension



LIFT THE HANDSET
OR PRESS
"SP-PHONE"



DIAL "5"

 


DIAL PARKED
EXTENSION
NUMBER


- Even when several outside calls are placed on hold simultaneously, you can retrieve the desired outside call from another extension as following.



 LIFT THE HANDSET
OR PRESS
"SP-PHONE"



DIAL "58"

 


DIAL PARKED
CO NUMBER
(1 through 6)

Flexible CO Button


Allows each CO button to change into CO number which is different from printed CO number.

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the KX-T30830, KX-T30820 or KX-T30850 to "**PROGRAM**".

 
■ Setting



 PRESS "CO" WHICH IS CHANGED INTO DIFFERENT CO NUMBER



 DIAL THE CO NUMBER WHICH IS SET NEWLY (1 through 6)



PRESS "MEMORY"

 
- After programming all CO buttons, return the MEMORY switch to "**SET**".
- If a call reaches through the CO line that is not assigned in the CO button, the ICM indicator will be flashing quickly, just lift the handset or press the SP-PHONE button, even in the "MAN ANSWER" mode.
- If you make a call with the CO line of which number is not assigned, the ICM indicator will light.
- If a call on CO line of which number is not assigned, is placed on hold, the ICM indicator will flash. To retrieve on hold, press the ICM button.

Flexible DSS Button (KX-T30830 only)


Allows each DSS button to change into extension number which is different from printed extension number.

- Be sure the handset is in the cradle and the SP-PHONE button is off.
- Set the MEMORY switch of the KX-T30830 to "**PROGRAM**".


■ Setting



 PRESS "DSS" WHICH IS CHANGED INTO DIFFERENT EXTENSION NUMBER



 DIAL THE EXTENSION NUMBER WHICH IS SET NEWLY (11 through 26)









PRESS "MEMORY"

- After programming all CO buttons, return the MEMORY switch to "**SET**".


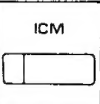



 
Auto CO Hunting


Can access any CO line which is not in use directly by picking up the handset or the speakerphone on and tell an extension user which line is accessing by lighting the CO line indicator.

■ Setting

	   	
LIFT THE HANDSET OR PRESS "SP-PHONE"	DIAL "721#"	HANG UP OR PRESS "SP-PHONE"

■ To Cancel

		   
LIFT THE HANDSET OR PRESS "SP-PHONE"	PRESS "ICM"	DIAL "720#"


HANG UP OR
PRESS
"SP-PHONE"

■ Dialing through CO Line

		
LIFT THE HANDSET OR PRESS "SP-PHONE"	WAIT FOR THE C.O. DIAL TONE	DIAL THE PHONE NUMBER

- When you access an extension in the Auto CO Hunting Mode, press the ICM button after lifting the handset or pressing the SP-PHONE button.

Account Code

This feature gives each message of the SMDR an account code of the called or calling party.

(Station Message Detail Recording—SMDR is cost saving feature that records all incoming and outgoing calls through CO line.) This feature has two modes—"Forced" and "Option". In the "Forced" mode, the account code must be entered every time the extension user dials. In the "Option" mode, the account code may be entered when a record of the account code is needed. When setting to the "Forced" mode, see page 3-34 in INSTALLATION MANUAL of the KX-T61610.

 
For use of this feature by using KX-T30850, the PROGRAMMABLE FEATURE (F3 only) button must be programmed beforehand as the Account Code button in the KX-T61610. For programming, see page 3-54 in INSTALLATION MANUAL.

Forced Mode


■ Making a Call



LIFT THE HANDSET
OR PRESS
"SP-PHONE"




 PRESS "CO"
(The FWD/DND
indicator
flashes.)



PRESS
"FWD/DND"
OR "F3"

 
(The FWD/DND
indicator
lights. And an
intermittent
tone is
heard.)



DIAL THE
ACCOUNT
CODE
(Account
code is
4 digits.)




 WAIT FOR THE
C.O. DIAL TONE



DIAL THE PHONE
NUMBER

 - You may dial 9 or 81 through 86 instead of pressing the CO button.
 - Account code must be required 4 numerical digits except for the and buttons.
- If the account codes are programmed with the telephone numbers for one touch dialing or system speed dialing, you need not dial the account code when making a call. Program as follows.




Account code
(4 digits)


Telephone
number

■ Receiving a Call

 If you want to record a calling party's account code in the SMDR, follow the below-mentioned procedure.



PRESS
"FWD/DND"
OR "F3"

 


DIAL THE
ACCOUNT CODE

- The FWD/DND or F3 button must be pressed before you hang up. If the distant party hangs up first, you must press the FWD/DND or F3 button within 30 seconds.


Option Mode

■ Making or Receiving a Call

 If you want to record a calling or called party's account code in the SMDR, follow the below-mentioned procedure.



PRESS
"FWD/DND"
OR "F3"

 

DIAL THE
ACCOUNT
CODE
(Account
code is
4 digits.)

- If you enter the wrong account code, press the FWD/DND or F3 button and enter the correct code.
- The FWD/DND or F3 button must be pressed before you hang up. If the distant party hangs up first, you must press the FWD/DND or F3 button within 30 seconds.




PANUG-005 -

STATION USER GUIDE

For touch tone and rotary telephone

Panasonic
EASA-PHONE

KX-T30810

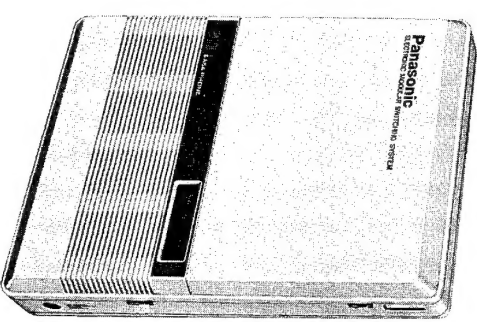

See this Station User Guide when you use a touch tone or rotary telephone as an extension.

PANUG-017 -

Panasonic Company

Division of Matsushita Electric Corporation of America

One Panasonic Way, Secaucus, New Jersey 07094

Panasonic Sales Company ("PSC"),

Division of Matsushita Electric of Puerto Rico, Inc.

San Gabriel Industrial Park, 65th Infantry Avenue, KM 9.5, Carolina, P.R. 00630

Printed in United Kingdom

PQQX5291YA F1086S1099H

Basic Operation

Detailed Operation

Contents

Basic Operation

Quick Reference Card	2
To Make Calls	
Inter Office Calling	6
(Intercom)	6
Outward Dialing	7
Speed Dialing	7
Calling Doorphone	7

When a Line is Busy

Automatic Call Back Busy (Camp-on)	8
Busy Station Signaling ..	9
Last Number Redial	9

To Receive Calls

Answer	10
Dial Call Pickup	10
Directed Call Pickup	10
Call Park Retrieve	11
Doorphone	11

While Having a Conversation

Call on Hold	12
Call Splitting	12
Conference	13
Call Waiting	13
Call Transfer	14

Detailed Operation

Use of Other Features	
Paging All Extensions	15
Paging Group	15
Paging-External	16
Paging and Transfer	16
Paging-Answer	17
Intercom Alerting Mode ..	17
External Feature Access ..	18
Pulse/Tone Conversion ...	19

Station Programming

Call Forwarding	20
Dial Call Pickup Deny	21
Do not Disturb	22
Data Line Security	23
Station Program Clear ..	24

Station Program Clear

Dialing (79#) will clear station programs on that extension.

 
- The following feature can be canceled.
Call Forwarding
Data Line Security
Dial Call Pickup Deny
Do not Disturb



LIFT THE
HANDSET



HANG UP



DIAL "79#"


- If dial tone (continuous tone) changes to reorder tone (intermittent tone) or a mistake is made, hang up and start again.
- Various activation tones and Ringing will be heard. (Refer to page 5-6 in INSTALLATION MANUAL.)
- If you phone has the FLASH key, depress it instead of flashing the hookswitch.

Station Programming (cont.)

Data Line Security

This feature provides security when transmitting data through an extension of the KX-T30810. Call waiting tones and hold time reminder tone are prohibited in this mode.

■ Setting



PRS	CHI	1	#
7	4		


LIFT THE
HANDSET

DIAL "741#"



HANG UP

■ To Cancel



PRS	CHI	OPER	#
7	4	0	

LIFT THE
HANDSET

DIAL "740#"



HANG UP

Quick Reference Card

TO MAKE CALLS

- Lift the handset first.
- After finishing your conversation, hang up the handset.

INTER OFFICE CALLING (Intercom)	Dial extension number (1 through 18)												
OUTWARD DIALING Automatic Line Access	<table><tr><td>WXY</td><td>9</td><td>Dial phone number</td></tr></table>	WXY	9	Dial phone number									
WXY	9	Dial phone number											
Individual Line Access	<table><tr><td>TUV</td><td>8</td><td>Dial CO number (1 through 3)</td><td>Dial phone number</td></tr></table>	TUV	8	Dial CO number (1 through 3)	Dial phone number								
TUV	8	Dial CO number (1 through 3)	Dial phone number										
SPEED DIALING (A rotary phone is not available.)	<table><tr><td>*</td><td>Dial speed access code (00 through 99)</td></tr></table>	*	Dial speed access code (00 through 99)										
*	Dial speed access code (00 through 99)												
CALLING DOORPHONE	<table><tr><td>For doorphone 1</td><td>For doorphone 2</td></tr><tr><td><table><tr><td>DEF</td><td>3</td></tr><tr><td>1</td><td></td></tr></table></td><td><table><tr><td>DEF</td><td>3</td><td>ABC</td><td>2</td></tr></table></td></tr></table>	For doorphone 1	For doorphone 2	<table><tr><td>DEF</td><td>3</td></tr><tr><td>1</td><td></td></tr></table>	DEF	3	1		<table><tr><td>DEF</td><td>3</td><td>ABC</td><td>2</td></tr></table>	DEF	3	ABC	2
For doorphone 1	For doorphone 2												
<table><tr><td>DEF</td><td>3</td></tr><tr><td>1</td><td></td></tr></table>	DEF	3	1		<table><tr><td>DEF</td><td>3</td><td>ABC</td><td>2</td></tr></table>	DEF	3	ABC	2				
DEF	3												
1													
DEF	3	ABC	2										
WHEN A LINE IS BUSY													
AUTOMATIC CALL BACK BUSY (camp- on)	<table><tr><td>TUV</td><td>8</td><td>Dial CO number</td><td>Hear a busy tone</td><td>MNO</td><td>6</td><td>Hear 2 beeps</td><td>Hang u handse</td></tr></table>	TUV	8	Dial CO number	Hear a busy tone	MNO	6	Hear 2 beeps	Hang u handse				
TUV	8	Dial CO number	Hear a busy tone	MNO	6	Hear 2 beeps	Hang u handse						
For out side calls													
For intercom calls	<table><tr><td>Dial Extension number</td><td>Hear a busy tone</td><td>MNO</td><td>6</td><td>hear 2 beeps</td><td>Hang u handse</td></tr></table>	Dial Extension number	Hear a busy tone	MNO	6	hear 2 beeps	Hang u handse						
Dial Extension number	Hear a busy tone	MNO	6	hear 2 beeps	Hang u handse								
BUSY STATION SIGNALING	<table><tr><td>Dial Extension number</td><td>Hear a busy tone</td><td>1</td></tr></table>	Dial Extension number	Hear a busy tone	1									
Dial Extension number	Hear a busy tone	1											
LAST NUMBER REDIAL	Lift handset <table><tr><td>#</td></tr></table>	#											
#													
•You may dial "80" instead of pressing the "'#"' button													

● You may dial "80" instead of pressing the "#" button

TO RECEIVE CALLS			
ANSWER	Lift handset		
DIAL CALL PICKUP	Lift handset	CHI 4	OPER 0
DIRECTED CALL PICKUP	Lift handset	CHI 4	Dial ringing extension number
CALL PARK RETRIEVE	Lift handset	JKL 5	Dial parked extension number

WHILE HAVING A CONVERSATION			
CALL ON HOLD	To hold	Flash hookswitch	Hear 2 beeps
	To cancel	Flash hookswitch	
CALL SPLITTING	Flash hookswitch	Dial 2nd party	• To alternate, flash hookswitch repeatedly
	Flash hookswitch	Dial 2nd party	Consult with 2nd party
CONFERENCE	Flash hookswitch	DEF 3	
	Hear a call waiting tone	Flash hookswitch	Hang up handset
CALL WAITING			Lift handset
			<ul style="list-style-type: none"> • Original call will be on hold and new call can be talked. • To terminate the original call and talk to the 2nd call, hang up and then lift the handset. (You don't need to flash the hookswitch.)

Do not Disturb

 
Each extension can be individually programmed from receiving outside or intercom calls.

■ Setting



LIFT THE HANDSET

DIAL "7110#"




HANG UP

■ To Cancel



LIFT THE HANDSET

 DIAL "70#"





HANG UP

Station Programming (cont.)



Dial Call Pickup Deny

Allows you to prohibit any other extension user from answering calls directed to you.

■ Setting

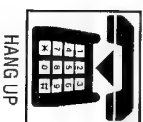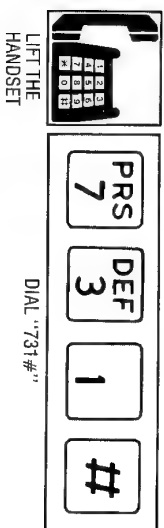


■ To Cancel

 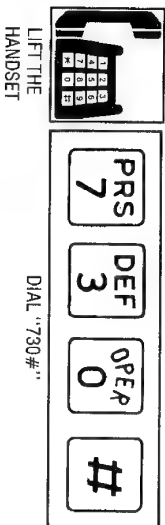

To Make Calls


Inter Office Calling (Intercom)

Station to station dialing within the KX-T30810 system.

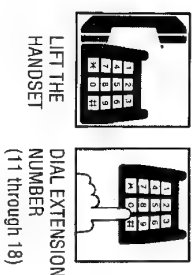


Outward Dialing

Each extension can automatically select an idle CO (Central Office) line within the KX-T30810.

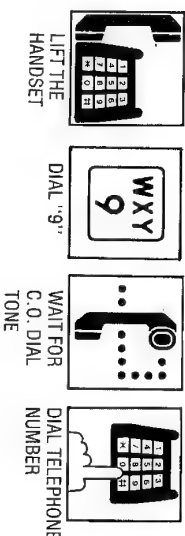


■ Automatic Line Access

An alternative method is to dial 8 and CO number. System will access individually any of 3 CO's.

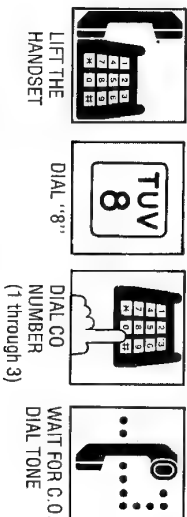

■ Individual Line Access

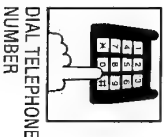


To Make Calls (cont.)

Speed Dialing

There are 100 system of speed dial numbers available.

■ Automatic Selection of CO

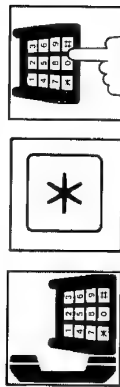

LIFT THE HANDSET
PRESS "*" DIAL SPEED ACCESS CODE (00 through 99)

- It is no need to access a CO line.
- A rotary phone is not available for the speed calling.
- Continuous use of speed dialing is impossible.

Calling Doorphone


Up to two doorphone (KX-T30865) can be connected to the KX-T30810.

■ Doorphone 1



LIFT THE HANDSET
DIAL "31"

■ Doorphone 2

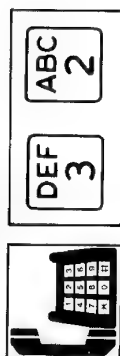

LIFT THE HANDSET
DIAL "32"


Station Programming

You may dial "0" instead of pressing the "#" button.

Call Forwarding


Intercom or outside calls to your extension can be automatically forwarded to any extension within the system.

■ Setting

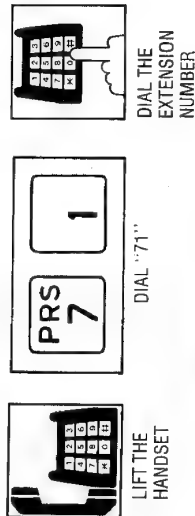

DIAL "71"


DIAL THE EXTENSION NUMBER

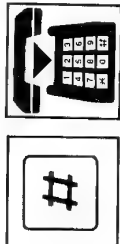

DIAL "#"

HANG UP

■ To Cancel

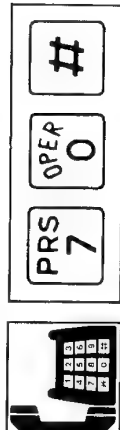

DIAL "70#"




HANG UP


Use of Other Features (cont.)

Pulse/Tone Conversion


When the dialing mode is required to change a pulse mode to a tone mode in one dialing sequence, this feature is used. (e.g. computer-accessed long distance service)

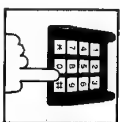

DIAL THE PHONE NUMBER

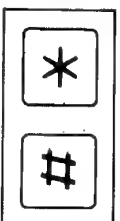

DIAL "*" #"

 


DIAL THE PHONE NUMBER

- When you dial using this feature, you must use the line selected in a pulse mode.
- Phone number after dialing "*" #" will be changed to tone mode.
- A rotary phone is not available for the Pulse/Tone Conversion.
- You should press "*" and "#" buttons within 10 seconds after the number of the long distance service company.

- When you use a standard telephone equipped with automatic dialer, be careful the followings:

Example: Computer-accessed long distance service

- Local access telephone number of the alternate long distance service company 765-4321, Authorization no. 0123456,
- Long distance no. 543-210-9876
- Pulse mode is required by local access telephone number of the alternate long distance service company.
- Service of MCI, SPRINT, METRO or other systems is used.

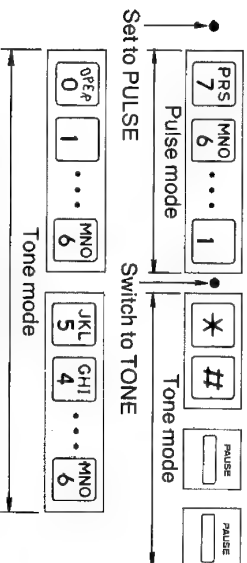

Store the long distance service company no. in PULSE mode, and switch to the TONE mode to memory the following numbers.

 
When a Line is Busy

Automatic Call Back Busy (Camp-on)


If the intercom extension or outside line you have dialed is busy, you will be automatically called back when the extension or the outside line becomes free using this function.

This feature is also known as camp-on.

■ For outside calls




DIAL "8"

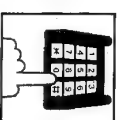

DIAL CO NUMBER (1 through 3)




YOU WILL HEAR A BUSY TONE

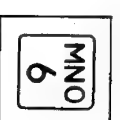

DIAL "6"



2 beeps


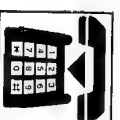


HANG UP




CONFIRMATION TONE

 ■ For intercom calls

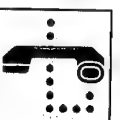

DIAL EXTENSION NUMBER (11 through 18)

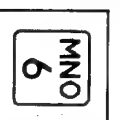

DIAL "6"



CONFIRMATION TONE OF 2 BEEPS WILL BE HEARD



HANG UP

■ When hearing a ring back




- When intercom calls, you will hear the ring back tone.
- When outside calls, you will hear the dial tone from CO.

- A call back busy cannot be activated on an extension which has a call on hold.
- If you make or receive a call during camp-on mode, the camp-on mode will be canceled.


When a Line is Busy (cont.)

Busy Station Signaling

If the extension you have dialed is busy, you can inform that extension that another intercom call is reaching by three beeps. For use of this feature, the other extension is required to be set this feature beforehand in the KX-T30810.

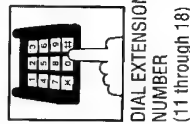

YOU WILL
HEAR A BUSY
TONE

 

- To answer your signaling, see "Call Waiting" on page 13.

Last Number Redial

The last phone number dialed on an outgoing call to CO can be redialed.



PRESS "#"

- You may dial "80" instead of pressing the "#" button.

External Feature Access

Allows extension user to access features of central office or host PBX. (e.g. CALL WAITING)

FEATURE can be supplied by Central Office.)


- The external feature (call waiting) can only be accessed when engaged on an outside call.

Call Waiting—Outside Line


- The following example shows you one of the procedures.




FLASH
HOOKSWITCH

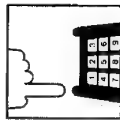

 
CONSULT WITH
THE ORIGINAL CALLER
WHILE THE 2ND CALL
IS ON HOLD



 CONSULT WITH
THE NEW CALLER
WHILE THE
ORIGINAL CALL
IS ON HOLD



FLASH
HOOKSWITCH

 

CONSULT WITH
THE ORIGINAL CALLER
WHILE THE 2ND CALL
IS ON HOLD



CONSULT WITH
THE NEW CALLER
WHILE THE
ORIGINAL CALL
IS ON HOLD


(If the calling party
on hold hang up,
the line is terminated.)

- Flashing the hookswitch and dialing "0" means flash operation.
- If KX-T30810 is connected to host PBX and flash operation is required, follow the procedure of flash operation which is required in the host PBX.

Use of Other Features (cont.)

Paging-Answer

A page from built-in speaker or external paging equipment can be answered from any extension.

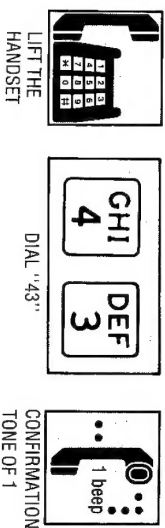


Intercom Alerting Mode

"Voice alerting" (through built-in speaker) that is established at the called party's extension, can be switched to "Tone alerting" (ringing).

- This feature required to be set beforehand in the KX-T30810. For programming, see page 2-29 in installation manual.

Switching to Tone Alerting

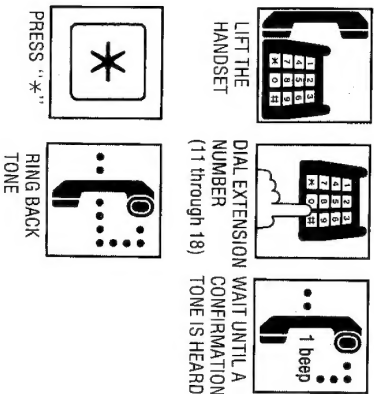

- A rotary phone is not available.
- You should press "*" button within 10 seconds after the dialing.


To Receive Calls

Answer




Dial Call Pickup

Through the use of this feature, an extension user can answer any ringing extension within their own pickup group.

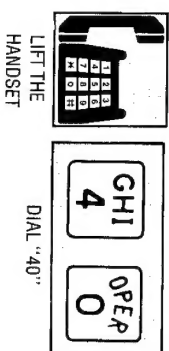

Directed Call Pickup

An extension may answer an incoming call that is ringing at another extension regardless of the pickup group.

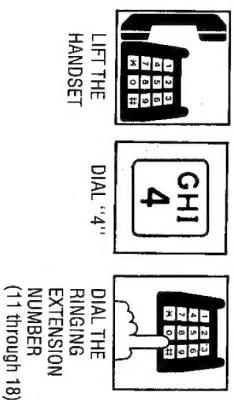


To Receive Calls (cont.)

Call Park Retrieve


Allows extension user to retrieve a call (intercom or outside) on hold at any extension.

■ To Park a call

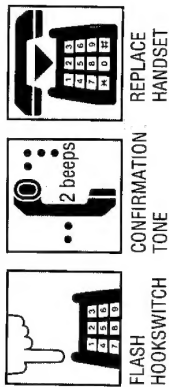


- Do not depress hookswitch for more than one second, or party will be disconnected.

■ To Retrieve a Parked Call at Any Other Extension

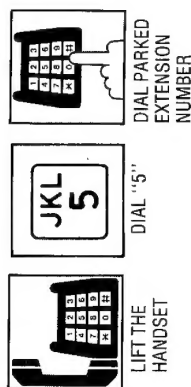

DIAL "5"
EXTENSION
NUMBER

 Doorphone




LIFT THE
HANDSET

- If calls from doorphones are not answered within 15 seconds, the calls will be cancelled.
- Each extension has to be programmed for receiving from doorphones. See the "Programmable Doorphone" on page 2-30 in Installation Manual.

Paging-External


Allows access to external paging equipment.

■ To Access

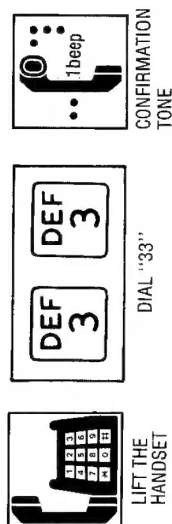

DIAL "33"

LIFT THE
HANDSET

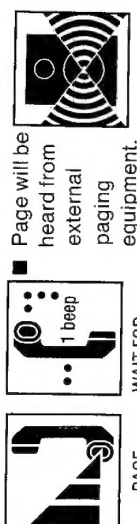


PAGE

WAIT FOR
CONFIRMATION
TONE AND TALK
OR HANG UP

Paging and Transfer

■ To Transfer a Call to the Paged Person

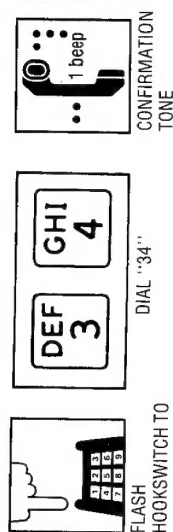

DIAL "34"

FLASH
HOOKSWITCH TO
PLACE A CALL
ON HOLD



PAGE

WAIT FOR AN
ANSWER
AND HANG UP

- At step 2 above, dial 35, 36 or 33 instead of 34.

Use of Other Features

 
Paging All Extensions

Allows paging to all extensions.


■ To Access



LIFT THE
HANDSET



DIAL "34"

 

CONFIRMATION
TONE OF 1
BEEP WILL
BE HEARD



PAGE



WAIT FOR AN
ANSWER
AND TALK

■ Page will be heard only from the built-in speaker of a KX-T30830, a KX-T30850 or a KX-T30820. It will not be heard from the built-in speaker of standard telephone.

Paging Group

 
Allows paging to either of two groups.

■ To Access


For Pickup Group 1



LIFT THE HANDSET



DIAL "35"

 

CONFIRMATION
TONE



PAGE



WAIT FOR AN
ANSWER
AND TALK

 
■ For Pickup Group 2
At step 2 above, dial 36 instead of 35.
■ Page will be heard only from the built-in speaker of a KX-T30830, KX-T30850 or a KX-T30820. It will not be heard from the built-in speaker of standard telephone.

While having a conversation

Call on Hold

If you wish to leave your phone unattended but want the caller you are in conversation with to wait, call on hold may be used. Intercom and outside calls may be placed on hold.

■ To Place a Call on Hold




FLASH
HOOKSWITCH




CONFIRMATION
TONE OF 2
BEEPS WILL BE
HEARD

• Do not depress hookswitch for more than one second, or party will be disconnected.

 
■ To Cancel



FLASH
HOOKSWITCH

 


FLASH
HOOKSWITCH

 

DIAL
SECOND
PARTY



 
CONSULT 2ND
PARTY 1ST
PARTY ON HOLD



FLASH
HOOKSWITCH



 2ND PARTY
ON HOLD
1ST PARTY IN
CONSULTATION



FLASH
HOOKSWITCH



1ST PARTY
ON HOLD
2ND PARTY IN
CONSULTATION


Call Splitting

Allows station user to alternate between two parties, either intercom or outside.

While having a conversation (cont.)

Conference

Allows for up to three party conference, (2-outside/1-inside), (1-outside/2-inside) or (3-inside).

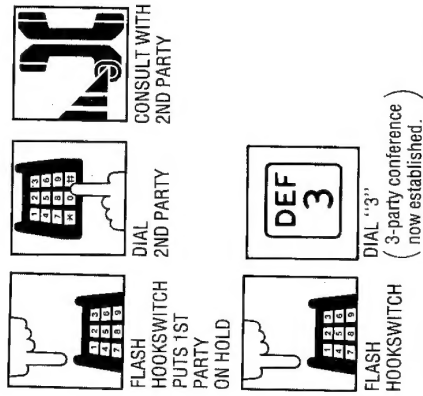

■ To Terminate Conference


Replace the handset.

- The other two parties are directly connected together and can converse with each other. (Intercom calls and intercom to outside are OK, outside to outside is not possible.)

Call Waiting


Call Waiting Tone during a conversation indicates there is a new incoming outside call or intercom call.

This feature is required to be set beforehand in the KX-T30810. For programming, see page 2-24 in installation manual.

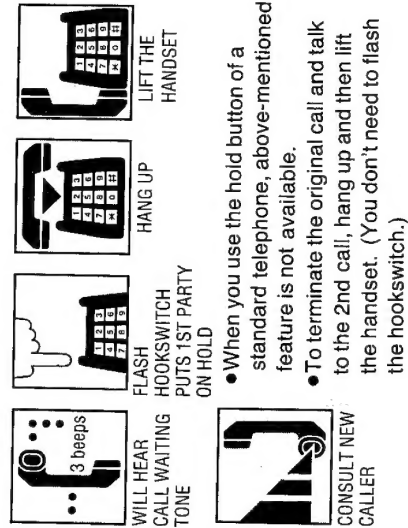


Call Transfer

Outside or intercom calls may be transferred to any extension manually.

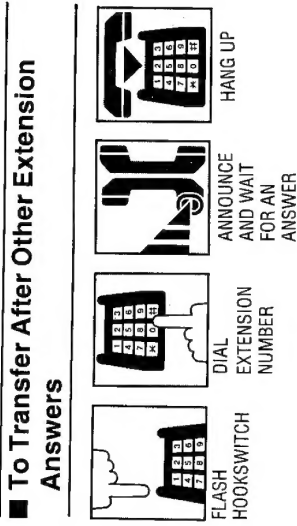


■ To Transfer without Announcing the other Extension

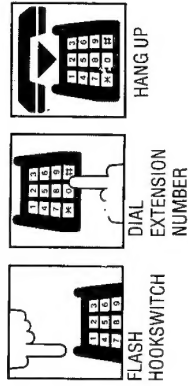

■ To Retrieve the Call

 If the other extension did not receive the transferred call within 30 seconds after the call has been transferred, the call will return to you. In this case:



■ To Change the Party to Whom a Call is Transferred before Hanging up

Flash the hookswitch to retrieve the call, then repeat the procedure of Call Transfer.